


REGULAR MAINTENANCE

- In poor conditions, should be cleaned regularly the tip which contact liquid.
- Do not use scouring pads to scrub, to avoid damaging to the sensor.

READ LABELS

Thank you for purchasing a product from FineTek. This operating manual explains the product's features, working principles, operation, maintenance methods, and usage precautions. It is designed to help users fully understand the correct usage of the product, preventing equipment damage and potential hazards to the operator.

 Caution Warning → Indicates that incorrect operation may result in a certain degree of injury and equipment damage.

 High temperature → indicates high temperature, touching may cause burns.



1. When installing the equipment system, the installation and safety of the equipment system are the responsibility of the installer.

2. Please use the product specification 10~28VDC power supply

3. The wire diameter of the M12 connector should be 24AWG~28AWG

4. Please wipe the label regularly, and only use dry cloth for wiping.



1. Lors de l'installation du système d'équipement, l'installation et la sécurité du système d'équipement sont de la responsabilité de l'installateur.

2. Veuillez utiliser l'alimentation 10~28VDC spécifiée par le produit

3. Le diamètre du fil du connecteur M12 doit être compris entre 24 AWG et 28 AWG

4. Veuillez essuyer l'étiquette régulièrement et utilisez uniquement un chiffon sec pour l'essuyer.



When using the product normally, if you need to touch the shell, please wear protective equipment first.



Lorsque vous utilisez le produit normalement, si vous devez toucher la coque, veuillez d'abord porter un équipement de protection.



FineTek Co.,Ltd.

No.16, Tzuchiang St., Tucheng Industrial Park, New Taipei City 23678, Taiwan.
Tel: 886-2-22696789 Fax: 886-2-22686682
Email: info@fine-tek.com <http://www.fine-tek.com>



08-SDX2-B2-EM.03/25/2026

